

INSTALLATION & MAINTENANCE MANUAL


TRIAD - SERIES XHP

HIGH PRESSURE BALL VALVES




Ball valves with threaded ends are installed on the line in the following way.


- Be sure to remove the protection at the ends (this protection should only be removed before installation; as it prevents foreign bodies from entering the valve). Check that the threading on the fitting is clean and not damaged in anyway.

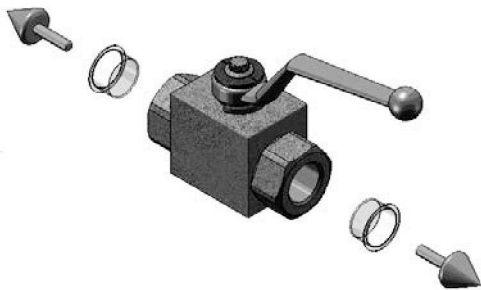

- When tightening onto the pipe, never hold the valve by the open/close lever, but use a wrench on the hexagon plug.

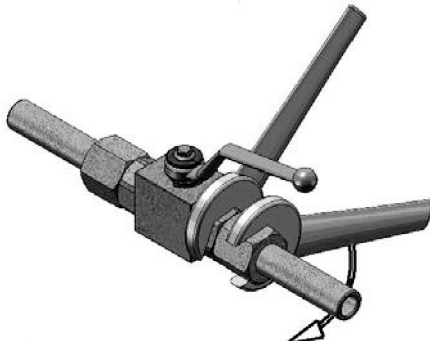

- The valves can be installed in any position and any angle, vertical or horizontal. They can be operated by hand or by using an actuator.
- Turn the open/close lever by 90° until it reaches its limit. Stop to open or close the valve by hand.

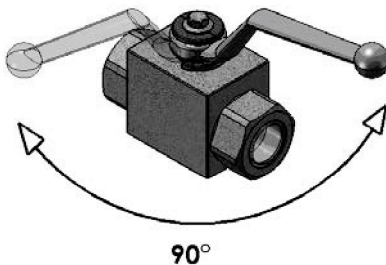


INSTALLATION & MAINTENANCE MANUAL


TRIAD - SERIES XHP

HIGH PRESSURE BALL VALVES

- The valve is OPEN when the lever is longitudinal (parallel to the line).

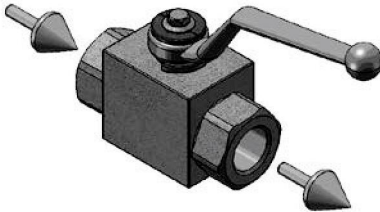

- The valve is CLOSED when the lever is perpendicular (at right-angles to the line).

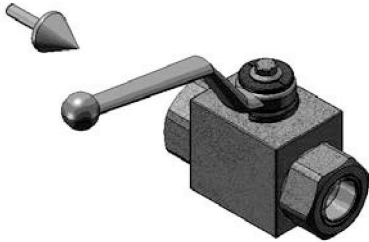

NEVER USE THESE VALVES AS PRESSURE REGULATORS

CAUTION

Never install the valves on lines that work temperatures below or above the allowed limits.

Never use thread locking permanent on the ends of the valves during installation, as these will immediately inhibit all the valve functions. Triad recommends thread sealant for all valves.

Never use the valves without authorization in plant handling the so-called 'harmful' fluids (i.e. not specified in the above standards).


Never attempt to assemble or change the valves when the line is pressurized.

Never exceed the max working pressure indicated on the valves.

INSTALLATION & MAINTENANCE MANUAL

TRIAD - SERIES XHP

HIGH PRESSURE BALL VALVES

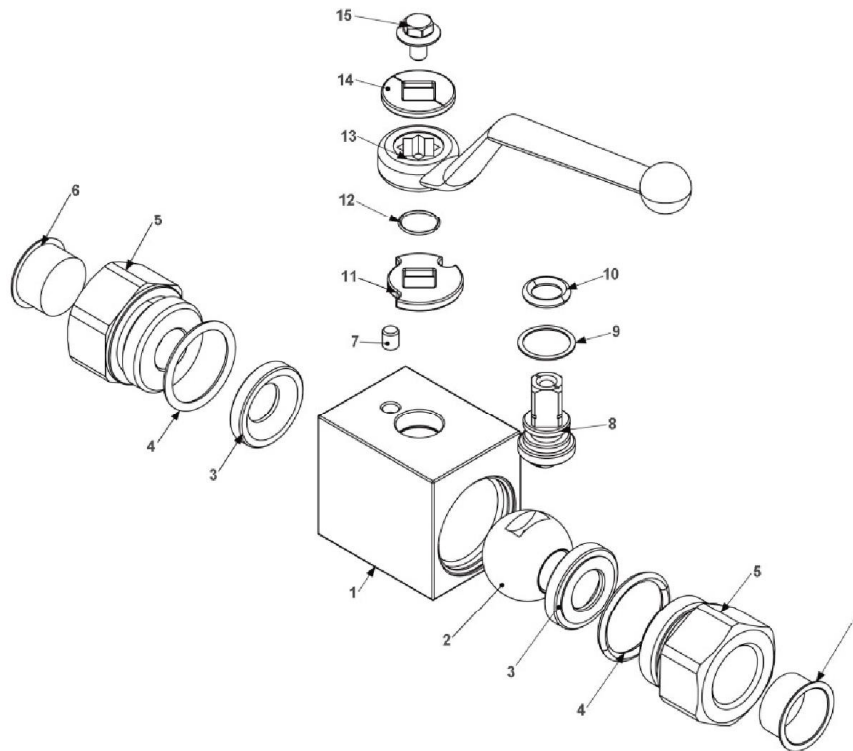

No.	Part Name	Material	Qty
1	Body	Carbon Steel / Stainless Steel	1
2	Ball	Carbon Steel / Stainless Steel	1
3	Ball Seat	DELFIN	2
4	Adapter o-ring	NBR	2
5	Adapter	Carbon Steel / Stainless Steel	2
6	Caps	PVC	2
7	Stop	Carbon Steel / Stainless Steel	1
8	Stem	Carbon Steel / Stainless Steel	1
9	Stem Ring	POM	1
10	Stem o-ring	NBR	1
11	Washer	Carbon Steel / Stainless Steel	1
12	Snap Ring	Stainless Steel	1
13	Handle	Zinc	1
14	Washer	Carbon Steel / Stainless Steel	1
15	Screw	DIN 6921 8.8	1